

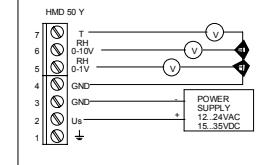
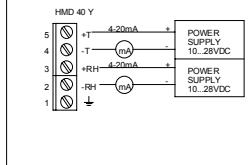


Spare part sensor
INTERCAP 15778 HM

ELECTRICAL CONNECTIONS

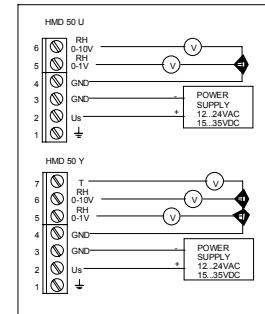

Installing the cable seal

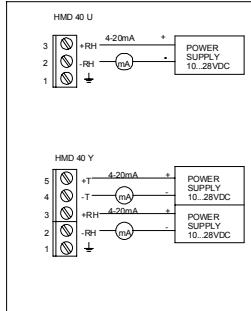